


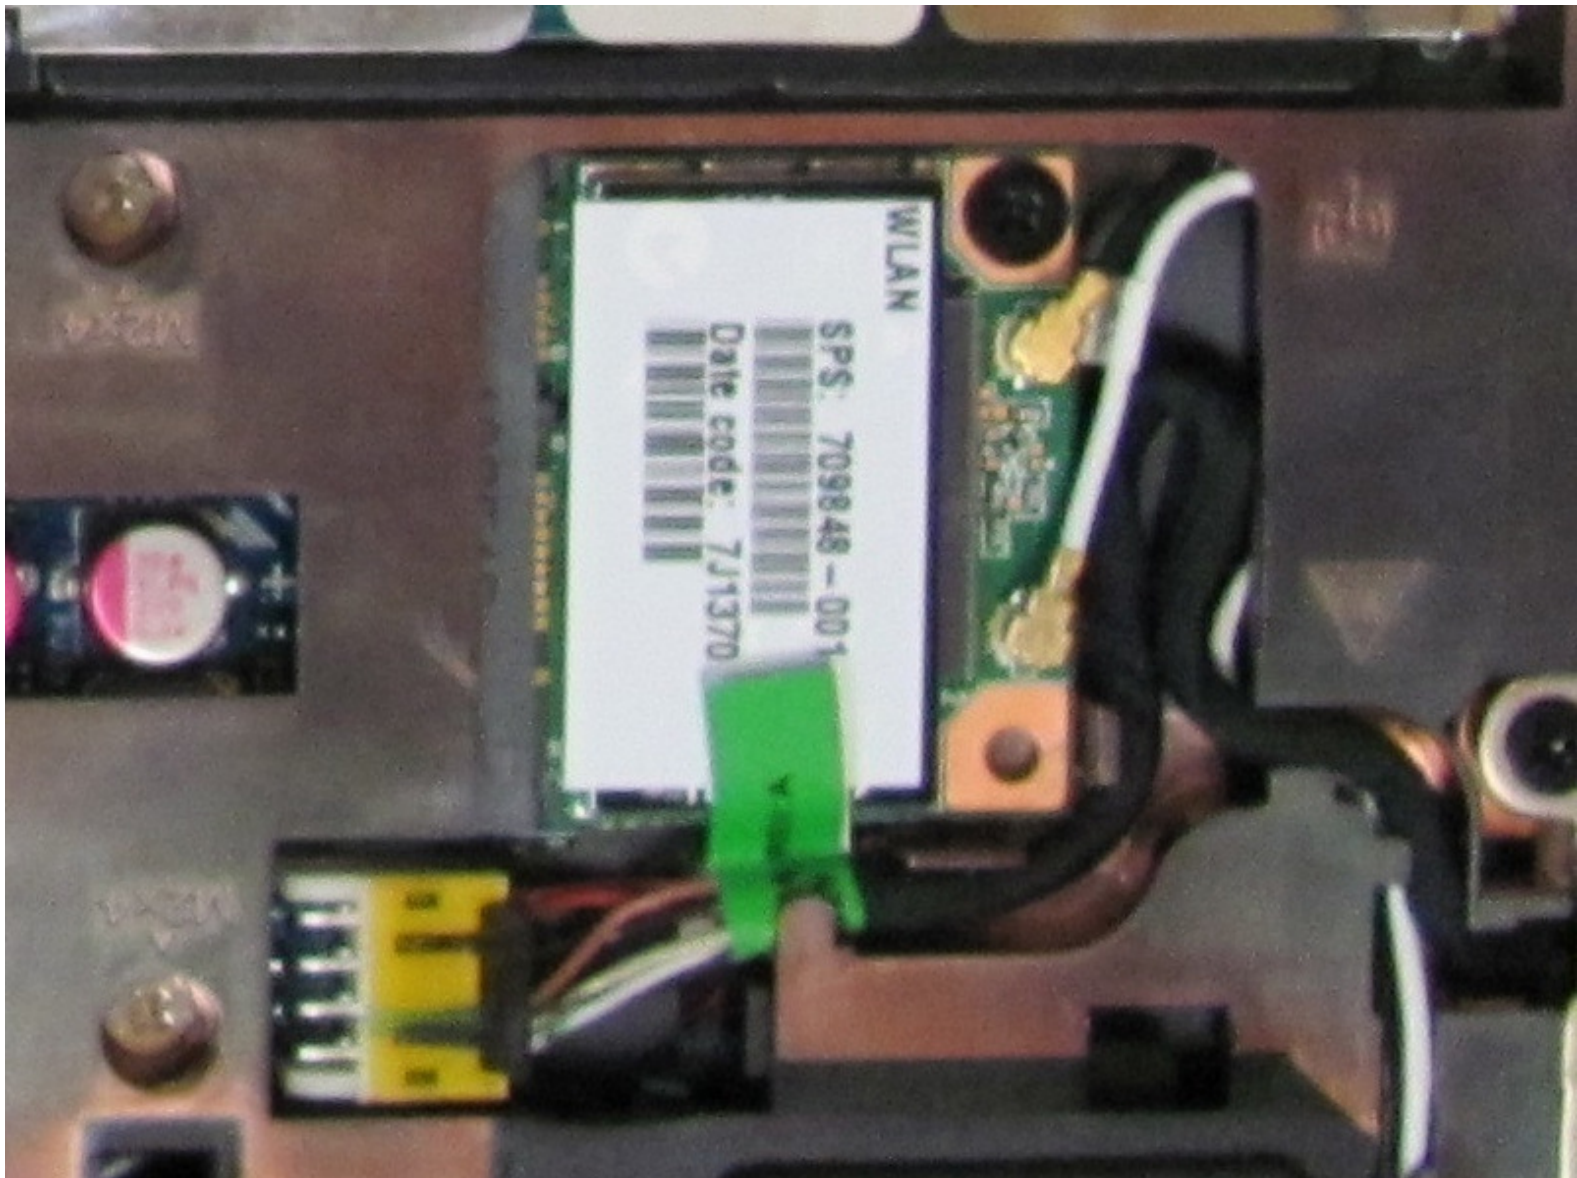

HP Pavilion Touchsmart 11z-e000 WLAN Card Replacement

This guide is to help you replace your laptop's wireless card.

Written By: Nguyen



INTRODUCTION

If your wi-fi keeps disconnecting or cannot connect at all even when other devices work properly, consider replacing your wireless card.



TOOLS:

- [Small Phillips Head Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Remove battery by pushing the two tabs and pulling the battery outwards slowly but firmly.

Step 2 — Remove back plate




- Using a spudger, pry the plastic plate off of the base of the computer.

Step 3 — Remove screws

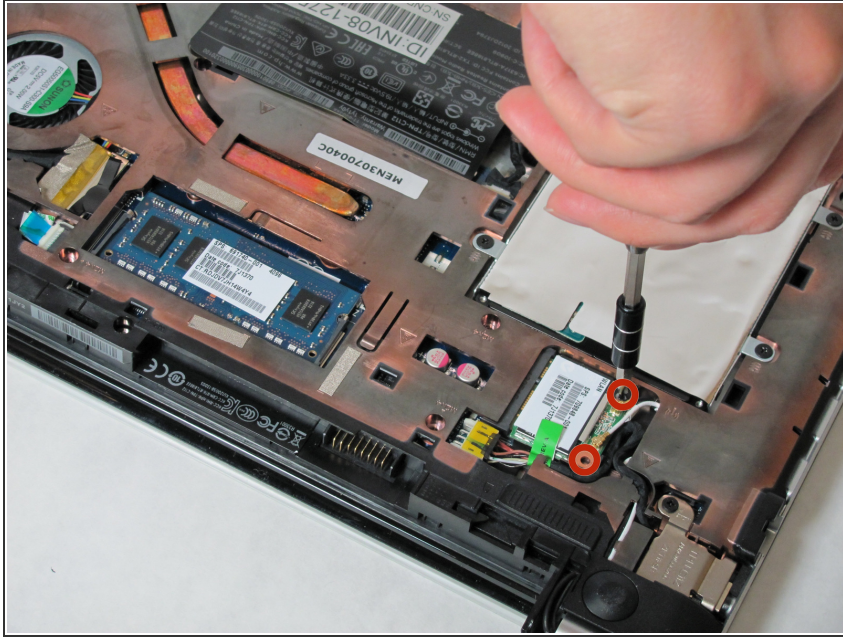


- Remove the screws from the WLAN card

Step 4 — Remove WLAN card

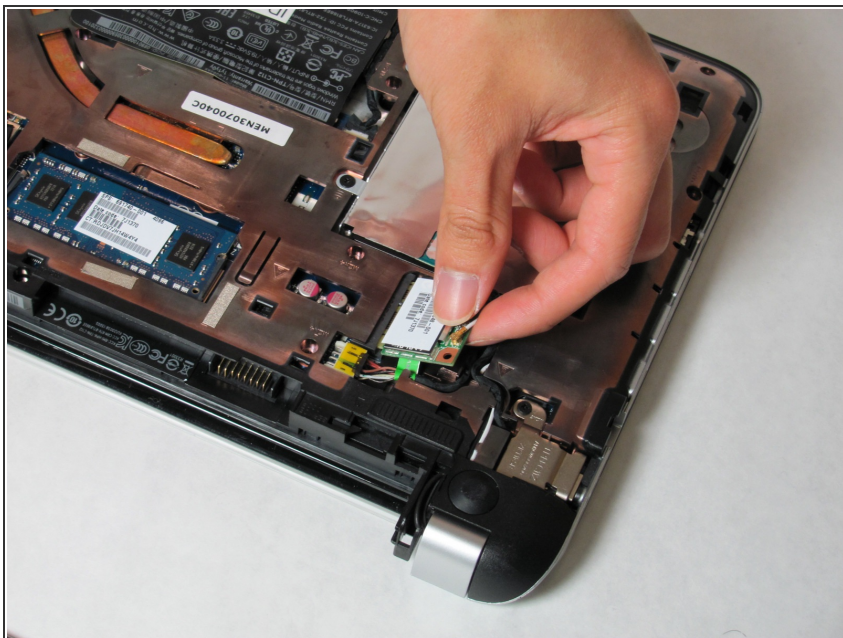

- Remove the card by sliding out of the slot.

Step 5 — Disconnect the cables

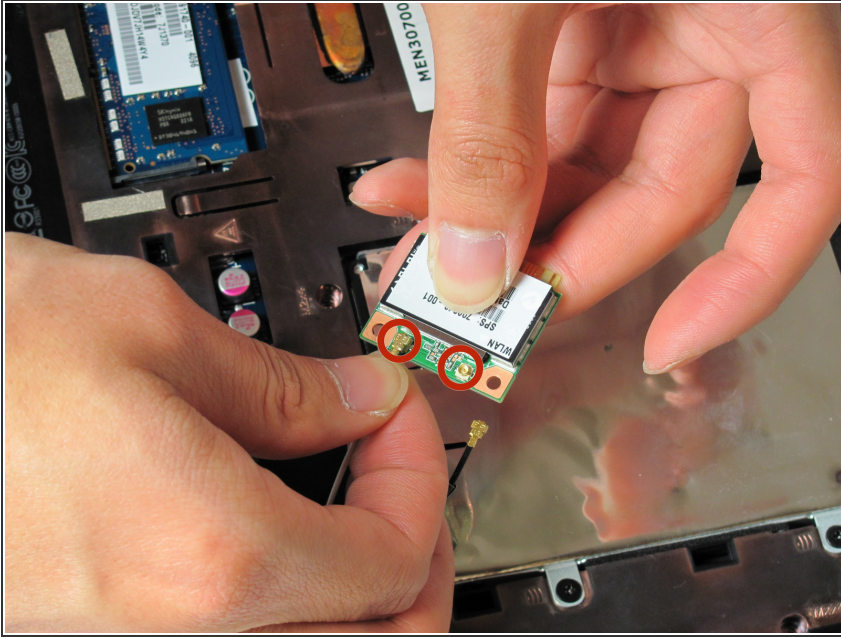

- Remove the cables from their connections by pulling them off. They should snap on and off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-11 02:00:38 AM.